

M44T User's Manual



Professional sound processor M44T Speaker Management



Designed in Italy Assembled in China

Catalog

Catalog.....	Page1
Safety Instructions.....	Page2
M44T Speaker Management.....	Page3~36

IMPORTANT SAFETY INSTRUCTIONS



Note: in order to ensure safety, please read these instructions carefully.

All safety and operating instructions should be read before the product is operated.



Attention: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture!

1 Ventilation

Do not block any ventilation openings.




2 Cleaning

Clean only with dry cloth.



3 Heat sources

Do not install near any heat sources such as radiators, stoves, or other apparatus that produce heat.

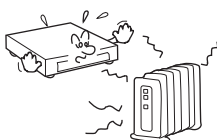

4 Power cord protection

Protect the power cord from being walked on or pinched particularly at plugs.



5 Overload

Power plug should not overload.



6 Objects or liquid entry inside the unit

Be careful that no objects fall or liquid is spilled inside the unit through ventilation openings.



7 Humidity

The unit should far away from water.



8 Maintenance

Refer all servicing to qualified service personnel. To prevent the risk of shock, do not attempt to service this equipment yourself because opening or removing covers may expose you to dangerous voltage or other hazards.



M44T Digital Speaker Processor

 
User Manual

Described below are the functions of the front panel control buttons and encoders for the M44T.




- **Getting Started**


As soon as the M44T is turned ON the device model name will appear in the LCD screen:



 and a status bar will show the progress of the M44T initialization process:



 After the initialization, the M44T will show again on the LCD the opening screen.



- **Encoders and ENTER, ESC buttons**

The M44T is equipped with 3 Relative Encoders, "NAV/PM1", "PM2" and "PM3", These encoders allow you to navigate the user interface and edit sections of the processor. They allow the user to navigate within the screen for the selection of sub-menus, pages and parameters and to select the values to be assigned during the editing operations.

The "ENTER" and "ESC" buttons allow the user to confirm or NOT confirm the operations performed by the encoders.

- **UTILITY, A/B/C/D and 1/2/3/4 buttons**

The UTILITY button allows the User to enter the Sub-menus and set the general characteristics of the Processor. The A, B, C and D buttons allow the User to enter the Editing Menus of the Processor's Input Channels and buttons 1, 2, 3 and 4, allow the User to enter the Editing Menus of the Processor's Output Channels.

The A, B, C and D buttons as well as the 1, 2, 3 and 4 buttons have double functions dependent on the push and hold time.

When the A, B, C and D buttons are pushed and held for more than one second Input Channels A or B or C or D are either muted or unmuted. The red LED will illuminate when the Channel is muted. When the "MUTE" LED is OFF, then the related Input Channel is UN-MUTED.

A momentary push of the A, B, C and D buttons enters the Editing Mode for the Input Channels (see later for the Input Channel Editing details).

 
The blue "EDIT" LED will now be ON.

When the 1, 2, 3 and 4 buttons are pushed and held for more than one second the Output Channels 1, 2, 3, and 4 are either muted or unmuted. The red LED will illuminate when the Channel is muted. When the "MUTE" LED is OFF, then the related Output Channel is UN-MUTED.

A momentary push of the 1, 2, 3 and 4 buttons enters the Editing Menu for the Output Channels (see later for the Output Channel Editing details). The blue "EDIT" LED will now be ON.

- **M44T Menu and Sub-Menu Structures**

As stated above, the start-up default screen is the following factory preset:



From this point, sub-menus are accessed using the UTILITY", "A/B/C/D", "1/2/3/4", "ENTER" and "ESC" buttons and all parameters and values are navigated by the "NAV/PM1", "PM2" and "PM3" encoders. Please refer to the following menu structures:

MENU "UTILITY MENU" [Access by pushing the "UTILITY" button]

NAV/PM1 Encoder

[to navigate between menus]

PM2 or PM3 Encoder

[to chose option, then ENTER to load it;
(*) indicates the selected option]

1 UTILITY MENU:.....

<< System Utilities >>

ENTER ↑ ESC

1.1 SYSTEM UTILITY:

<< Master Gain >>

ESC
ENTER

Master Gain

Master Gain: +12dB

:

Master Gain: -12dB

1.2 SYSTEM UTILITY:

<< Master Volume >>

ESC
ENTER

Master Volume

Master Volume: +12dB

:

Master Volume: -12dB

1.3 SYSTEM UTILITY:

<< Delay Units >>

ESC
ENTER

Delay Units

Unit: Time(ms)

*

Unit: Distance (m)

1.4 SYSTEM UTILITY:

<< Ramps on changes >>

ESC
ENTER

Ramps on changes

Ramps: Off

*

Ramps: On

1.5 SYSTEM UTILITY:

<< Software Version >>

ESC
ENTER

Software Version

Version: V1.01

*

2 UTILITY MENU:.....

<< Program Utilities >>

ENTER ↑ ESC

2.1

PROGRAM UTILITY:

<< Recall a Program >>

ESC
ENTER

Recall a Program

01: Preset 01

:

24: Preset 24

2.2 PROGRAM UTILITY:

<< Save a Program >>

ESC
ENTER

Save a Program

01: Preset 01

:

24: Preset 24

2.3 PROGRAM UTILITY:

<< Delete a Program >>

ESC
ENTER

Delete a Program

01: Preset 01

:

24: Preset 24

3 UTILITY MENU:.....

<< Interface Utilities >>

ENTER ↑ ESC

3.1

INTERFACE UTILITY:

Interface Setup

ESC
ENTER

Interface Setup

Source: USB

Source: TCP/IP

*

Source: L-MAN MASTER

Source: L-MAN SLAVE

*

4 UTILITY MENU:..... << Security Utilities >>

ENTER ↓ ↑ ESC

4.1 SECURITY UTILITY: Lock Unit

ESC
ENTER

Lock Unit
Lock: Off *
Lock: On

4.2 SECURITY UTILITY: User Password

ESC
ENTER

User Password
[]

4.3 SECURITY UTILITY: Enable Password

ESC
ENTER

Enable Password
Password: Enable *
Password: Disable

(For the details about the Password Setting/Enable and Unit Lock, , refer to the "Utility Menus Use" Section)

MENU "Input A/B/C/D" Input

Channels Editing [Access by pushing the "A/B/C/D" buttons]

NAV/PM1 Encoder

[to navigate between menus]

NAV/PM1 Enc.

[to chose values for the parameters, no need to confirm the chosen values, which are automatically loaded during the encoders use]

PM2 Enc.

PM3 Enc.

1. Input A/B/C/D Name

Name = [Name]

ENTER ↓ ↑ ESC

-> Name = _

(For Editing the Device's Name, refer to the Details on the "Utility Menus Use" Section)

2. Input A/B/C/D Source

Source = Analog

ENTER ↓ ↑ ESC

-> Source = Analog

PM1 N/A

Analog

Same as PAR2

Digital

3. Input A/B/C/D Gain

Gain = + 0.0 dB

ENTER ↓ ↑ ESC

-> Gain = + 0.0 dB

PM1 N/A

+6 db

Same as PAR2

-12 dB

4. Input A/B/C/D Delay

Delay = 0.000 ms

ENTER ↓ ↑ ESC

-> Delay = 0.000 ms

PM1 N/A

000.0000mS
[1 ms steps]
848.0000mS

000.0000mS
[20.8 us steps]
000.9984mS

5. Input A/B/C/D PEQ/SHV - 1/7

1.00kHz BW/SHV_Slope=1.00/up to -12dB +0.0dB

ENTER ↓ ↑ ESC

(when the filter's gain = 0.0dB ONLY, through the PM2 it is possible to chose and select between a Bell or a Shelving filter)

If through the PM2, being the filter's gain = 0.0dB, has been selected a Bell filter, just defining its Bandwidth BW to be greater then 0, then the Bell filters can be set by the following parameters

5.1 Input A/B/C/D EQ-X (up to 5 filters available)

-> 1.00kHz BW=1.00 +0.0dB

[Freq.] 20Hz
:
20kHz

[BW] 0.0
:
3.00

[Amp.] -15.0 dB
:
+15.0 dB

If through the PM2, being the filter's gain = 0.0dB,
has been selected a **Low Shelving filter**, just defining its
Slope (1st or 2nd order available, -6dB or -12dB), then the
Low Shelving filter can be set by the following parameters

5.2 Input A/B/C/D EQ-X (up to 5 filters available)

-> 1.00kHz (-6/-12)LoSh +0.0dB

[Freq.] 20Hz
:
20kHz

PM2 N/A

[Amp.] -15.0 dB
:
+15.0 dB

If through the PM2, being the filter's gain = 0.0dB,
has been selected a **High Shelving filter**, just defining its
Slope (1st or 2nd order available, -6dB or -12dB), then the
High Shelving filter can be set by the following parameters

5.3 Input A/B/C/D EQ-X (up to 5 filters available)

-> 1.00kHz (-6/-12)HiSh +0.0dB

[Freq.] 20Hz
:
20kHz

PM2 N/A

[Amp.] -15.0 dB
:
+15.0 dB

MENU "1/2/3/4 Output Channels Editing" [Access by pushing the "1/2/3/4" buttons]

NAV/PM1 Encoder

[to navigate between menus]

NAV/PM1 Enc.

[to chose values for the parameters, no need to confirm the chosen values,
which are automatically loaded during the encoders use]

PM2 Enc.

PM3 Enc.

1. Output[x] [Name] HPF

20.0 Hz No Cut-Off

ENTER   ESC

-> 20.0 Hz No Cut-Off

PM1 N/A

[Freq.] 20Hz
:
20kHz

[Type/Slope] No Cut-Off
:
Bessel 24dB/Oct

2. Output[x] [Name] LPF

20.0 Hz No Cut-Off

ENTER   ESC

-> 20.0 Hz No Cut-Off

PM1 N/A

[Freq.] 20Hz
:
20kHz

[Type/Slope] No Cut-Off
:
Bessel 24dB/Oct

3. Output[x] [Name] PEQ/SHV - 1/7

1.00kHz BW/SHV_Slope=1.00/up to -12dB +0.0dB

ENTER   ESC

(when the filter's gain = 0.0dB ONLY, through the PM2 it is possible to
chose and select between a Bell or a Shelving filter)

If through the PM2, being the filter's gain = 0.0dB,
has been selected a **Bell filter**, just defining its Bandwidth
BW to be greater then 0, then the Bell filters can be set by
the following parameters

3.1 Output[x] [Name] EQ-X (up to 7 filters available)

-> 1.00kHz BW=1.00 +0.0dB

[Freq.] 20Hz
:
20kHz

[BW] 0.05
:
3.00

[Amp.] -15.0 dB
:
+15.0 dB

If through the PM2, being the filter's gain = 0.0dB,
has been selected a **Low Shelving filter**, just defining its
Slope (1st or 2nd order available, -6dB or -12dB), then the
Low Shelving filter can be set by the following parameters

3.2 Output[x] [Name] EQ-X (up to 7 filters available)
-> 1.00kHz (-6/-12)LoSh +0.0dB

[Freq.] 20Hz
:
20kHz

PM2 N/A

[Amp.] -15.0 dB
:
+15.0 dB

If through the PM2, being the filter's gain = 0.0dB,
has been selected a **High Shelving filter**, just defining its
Slope (1st or 2nd order available, -6dB or -12dB), then the
High Shelving filter can be set by the following parameters

3.3 Output[x] [Name] EQ-X (up to 7 filters available)
-> 1.00kHz (-6/-12)HiSh +0.0dB

[Freq.] 20Hz
:
20kHz

PM2 N/A

[Amp.] -15.0 dB
:
+15.0 dB

4. Output[x] [Name] Vu-Meter

Vu-Meter = Level

ENTER ↓ ↑ ESC

-> Vu- Meter = Level

PM1 N/A

Level

Same as PAR2
Limiter Act.

5. Output[x] [Name] Name

Name = [Name]

ENTER ↓ ↑ ESC

-> Name = _

(For Editing the Device's Name, refer to the *Details on the "Utility Menus Use"* Section)

6. Output[x] [Name] Source

Source = InA

ENTER ↓ ↑ ESC

-> Source = InA

PM1 N/A

A=0dB

Same as PAR2

D=0dB

7. Output[x] [Name] Gain

Gain = + 0.0 dB

ENTER ↓ ↑ ESC

-> Gain = + 0.0 dB

PM1 N/A

+6 dB

Same as PAR2

-12 dB

8. Output[x] [Name] Limiter

A: 5ms R: 0.2s +20dB

ENTER ↓ ↑ ESC

-> A: 5ms R: 0.2s +20dB

[Atk time] 5ms
:
200ms

[Rel time] 0.1s
:
3.0s

[Amp.] -10.0 dB
:
+20.0dB (OFF)

9. Output[x] [Name] Delay

Delay = 0.000 ms

ENTER ↓ ↑ ESC

-> Delay = 0.000 ms

PM1 N/A

000.0000mS
[1 ms steps]
848.0000mS

000.0000mS
[20.8 us steps]
000.9984mS

10. Output[x] [Name] Polarity

Polarity = Normal

ENTER ↓ ↑ ESC

-> Polarity = Normal

PM1 N/A

Normal

Same as PAR2

Invert

● Menu "UTILITY" [access by pushing the "UTILITY" button]

From the "Default Screen", it is possible access the "UTILITY" menu pushing the "UTILITY" button and the Sub-Menus pages can be selected just rotating clockwise and counter-clockwise the "NAV/PM1" encoder.

Once selected the sub-menu page, using the "ENTER" button can be accessed the Sub-Menus pages, again "scrollable" using the "NAV/PM1" encoder and accessible for the parameters' editing pushing again the "ENTER" button.

Through the "ESC" button, it is any time possible to go back to the action and page preceding the "ENTER" button use.

Once inside the Sub-Menus pages, the several options can be scrolled and using the PM2 or PM3 encoders and selected/confirmed pushing the "ENTER" button.

Note: In every Sub-Menu the option currently selected/running will have an **asterisk "*"** showing to the right of the description on the LCD screen.

Options that are not selected/running will be displayed with NO Asterisk.

 
Pushing the ENTER button on an unselected option will mean an asterisk will then appear and this option will now take over as the currently selected/running option.

System Utilities Sub-menu – this sub-menu allows to access several operations related to the M44T Start Up and General Configuration:




From the "System Utilities Sub-menu", pushing "ENTER" and then using the "NAV/PM1" encoder for scrolling will give access to the following pages:

- **Master Gain page:** from this screen it is possible to set the Master Gain affecting the ALL Inputs Level from -12dB to +12dB




press ENTER then use the "PM2" or "PM3" buttons.

 The following is an example screen for the "Master Gain" page that has set the Master Gain of +0.0dB:



 
- **Master Volume page:** from this screen it is possible to set the Master Volume affecting the ALL Outputs Level from -12dB to +12dB



A screenshot of a yellow screen with a black border. The text "SYATEM UTILITY" is at the top, and "Master Volume" is in the center. There are two dashes "--" on either side of "Master Volume".


press ENTER then use the "PM2" or "PM3" buttons.

 The following is an example screen for the "Master Volume" page that has set the Master Volume of +0.0dB:



A screenshot of a yellow screen with a black border. The text "Master Volume" is at the top, and "Master Volume: +0.0" is in the center.

 - **Delay Time/Distance:** this page allows you to select the measurement unit to be used for the Delays: **Time** (in milliseconds "ms") or **Distance** (in meters "m"):



A screenshot of a yellow screen with a black border. The text "SYSTEM UTILITY" is at the top, and "Delay Units" is in the center. There are two dashes "--" on either side of "Delay Units".


By pressing ENTER and rotating the "PM2" or "PM3" encoder, it is possible to select the measurement unit to be used for the delay, which will be confirmed by pushing the ENTER button.

The following screen shows the selected delay measurement is Time (milliseconds)



A screenshot of a yellow screen with a black border. The text "Delay Units" is at the top, and "Unit : Time (ms)" is in the center. There is an asterisk "*" on the right side.

 - **Ramps on changes:** this page allows you to activate or de-activate Fading-in and Fading-out ramps on the input/output volumes when any parameter changes:




When connected to the M44T by the PC remote control software, it is possible to request sudden parameter changes where the difference between the old parameter and the new one can cause unwanted "click" noises (big differences in volume changes) or "bumps" (big differences in Hp/Lp filters cutting frequency values) as the DSP reconfigures.

The Fading-In and Fading-Out ramps eliminate any potential clicks and bumps.

This function can be de-activated when the unit needs to be used in "live" conditions and small parameter adjustments are requested "on the fly" during live performance.

 The following screen shows the Fading ramps function is Off and therefore de-activated:



- **Software Version:** this page allows you to confirm the Software Version running on the M44T:



The correct Software Version is "V1.01"

Program Utilities Sub-menu – this sub-menu allows you to access several options related to the M44T operating mode and to manage the presets stored and recallable within the Unit:

UTILITY MENU
-- Program Utilities --

By pressing the ENTER button and then using the "NAV/PM1" encoder the following pages can be accessed:

- **Recall a Program:** this page allows the Loading of a preset program. You can store up to 60 presets in the M44T memory:

PROGRAM UTILITY
-- Recall a Program --

By pressing ENTER and rotating the "PM2" or "PM3" encoders, it is possible to scroll through all current available user presets.

If NO USER PRESETS are stored yet, the screen will show the following:

Recall a Program
No Stored Xovers.

If presets have previously been stored by the user, anyone of them can be recalled:

[ENTER] to Recall.
01: PRESET 1

By using the "PM2" or "PM3" encoder it is possible to scroll through the stored presets. Once the desired preset appears on the screen select it by pressing the "ENTER" button and this will force the M44T to begin to load this selected preset and the following transitory screen will appear:

Loading New Program
01: PRESET 1

Once loaded the M44T will exit to the "Recall a Program" screen automatically and the above screen will disappear:

PROGRAM UTILITY
-- Recall a Program --

 
Note: at any time it is possible to quit the recalling action by pressing the "ESC" button.

- **Save a Program:** this page allows you to store a new preset in the M44T's memory:



By pressing the ENTER button and rotating the "PM2" or "PM3" encoder, it is possible to scroll through the previously saved presets and the available empty locations (identified by "Empty Memory").

If no user presets are stored, the "Save a Program" screen will show empty memory locations for all 1-24 presets as shown in the example below for location 10:



When storing an edited configuration for the M44T, select the location for a preset from the **60 available** by using the "PM2" or "PM3" encoders.

 
Once the desired location appears on the screen press ENTER again to reach the

"Set Program Name" page.

In this page the User can enter a Preset Name (**up to 16 Characters**) by using the "PM2" or "PM3" encoder to choose a character and the "NAV/PM1" encoder to move between the 16 available locations for the character's positioning.


The current position of the cursor is shown by a "blinking underscore".

The following is an example of a screen while entering the preset name "Stage 1 2x2" in location 10:




To store the Preset Name press the "ENTER" button again.

 The above action will take you to the **"Enter to Save"** page showing the selected location for the preset and the final edited name:



 Pressing "ENTER" again, will store the preset in the selected location with the chosen name and the following transitory screen will appear on the LCD:



Once the preset is stored, the above screen will disappear returning to the following screen:

PROGRAM UTILITY
-- Save a Program --

If during the Preset Storing process you want to overwrite an existing memory location select this location in the "**Save a Program**" page, then ENTER and you will be asked if you want to overwrite this preset with the following "**[ENTER] to Overwrite**" screen displaying the currently stored preset and location:

[Enter] to Overwrite
10: Stage 1 2x2 ?

If you wish to proceed press "ENTER" again and the M44T will go ahead with the "**Set Program Name**" page and the subsequent overwrite on completion of the previously described storing process..

Note: at any time it is possible to quit the storing action by pressing the "ESC" button.

- **Delete a Program:** this page allows you to delete a preset already stored in the M44T memory:

PROGRAM UTILITY
-- Delete a Program --

By pressing the ENTER button and rotating the "PM2" or "PM3" encoder, it is possible to scroll through the previously saved presets and the available empty locations (identified by "Empty Memory").

If no user presets are stored, the "Delete a Program" screen will show empty memory locations for all 1-60 presets as shown in the example below for location 10:

Delete a Program
10: Empty Memory

If Presets are available they will be shown in the "Delete a Program" page as follows:

Delete a Program
10: Stage 1 2x2

By using the "PM2" or "PM3" encoder it is possible to select a preset to be deleted.

 
Pressing the "ENTER" button on a selected preset will bring up the "**[Enter] to Delete.**" page showing the selected preset.

For example, if we want to delete the preset 10, "Stage 1 2x2", the screen will be the following:



[ENTER] to Delete.
10: Stage 1 2x2

Confirming the deletion by pressing "ENTER" again, will force the M44T to erase the selected preset and the following transitory screen will appear:



Erasing Xover Memory.....
10: Stage 1 2x2

Once the preset is deleted, the above screen will disappear returning to the following screen:



PROGRAM UTILITY
-- Delete a Program --

Note: At any time it is possible to quit the deleting action by pressing the "ESC" button.

Interface Utilities Sub-menu – this sub-menu allows you to define the remote control interface [USB or TCPIP or M-LAN MASTER or M-LAN SLAVE] to be used for controlling the M44T :



UTILITY MENU
-- Interface Utilities --

From "Interface Utilities", press "ENTER" to access the Interface Setup.

- **Interface Setup:** this screen allows you to choose the remote control protocol for the M44T.



INTERFACE UTILITY
-- Interface Setup --

By pressing "ENTER" and then using the PM2 or PM3 encoders you can choose between the Four possible interfaces (USB or TCPIP or M-LAN MASTER or M-LAN SLAVE) for the M44T. Pressing ENTER on a selected source will make an asterisk appear to the right of the description on the LCD as in the following example which shows the selected interface as USB.



Interface Setup
Source: USB *

Security Sub-menu – this sub-menu allows the User to set the parameters shown, lock the M44T and set a Password therefore limiting the unit's functions and controls to those who have access to the appropriate Password.



Press ENTER and then use the NAV/PM1 to scroll between options.

- **Lock Unit:** this sub-menu allows the user to lock the device so no parameters can be edited or modified.



When the Unit is in an unlocked condition, all parameters will be available for editing. When you select On, all parameters will be locked and are not available for editing.

 


When you select lock from the menu, the unit will be locked and the lock menu automatically exited. The screen will revert to the "Default" showing the current XOVER configuration and the preset selected and beside the preset's name a "keylock" icon indicating that the M44T is locked.


- **User Password:** from the "User Password" sub-menu:



Press "ENTER" to access the "**User Password**" page:



 
Using the PM2 or PM3 encoders to choose a character and the NAV/PM1" encoder to move between available locations you can enter a **6 Character** Password Name. The current position of the cursor for the characters to be entered is shown by a "blinking underscore". During this editing phase, the display is as follows if we were using "M44T" as the password:



The M44T will exit the "Unit Lock" sub-menu and jump to the "User Password" sub-menu page screen:



 If the password entered in the "Confirm Password" page matches the one entered in the "Enter Password" page, the following screen will appear.




The Password is now configured and held in the device's memory.

The user can now decide to "lock" the M44T by Password, inhibiting the access to ALL processor functions depending on the setting of the parameter "Password Enable/Disable, explained in the following paragraph

- **Enable Password:** from the "Enable Password" sub-menu:



 Press "ENTER" to gain access to the "**Enable Password**" screen:




Once a Password has been entered into the M44T through the steps described in the previous paragraph, it is possible to "Enable" or "Disable" the password function and therefore lock the M44T restricting access to all functions.

When a password has been entered you will be able to select the "Enable" option from the menu and the unit will not be accessible for editing. In "**Locked by Password Status**", all M44T functions are inhibited to the User, including the use of the Mute A/B/C/D and MUTE 1/2/3/4 buttons.


The only access available is to the parameters of the input/output channels (accessible by pressing the edit button), ONLY to READ the values (no editing possible) if the "be shown" flag in the "Show Parameter" Sub-Menu has been selected.

Once "Locked by Password" the "keylock" icon will appear on the default LCD screen and no menu pages will be accessible, with the exception of the "User Password" option.

 To regain access to the full operation of the M44T ENTER to the "User Password" screen and press the UTILITY Button to access the following screen to enable the correct password to be entered:



 After the correct password has been entered, you will be able to access the full functionality of the M44T, the "lock Icon" will disappear from the "Default Screen" and automatically the "Enable Password" page will be back to the "Disable" condition:



If no Password has been set within the M44T, as described in the previous paragraphs, the M44T will not allow you to enable any Password, and the choice in the "Enable Password" will be limited to only the "Disable" option.

 
- **Menu "Input A/B/C/D" Input Channels Editing [access by pushing the "A/B/C/D" buttons]**

From the "Default Screen", it is possible to access the "Input A/B/C/D" menu by pushing the "A" or "B" or "C" or "D" button. Once the button is pressed the related blue "EDIT" LED will turn ON. The Sub-Menu pages can now be scrolled through by rotating clockwise and counter-clockwise the "NAV/PM1" encoder.

For parameter editing it is necessary to press ENTER and an arrow will appear on the left of the screen "->". Then use the "PM2" and "PM3" encoders for selecting and setting the parameter values. On some parameters that have three independent values, you will also need to use the PM1 encoder, eg filter parameter settings.

Note: All parameter editing can be done using the "NAV/PM1", "PM2", and "PM3" encoders and the current shown value of the selected option is AUTOMATICALLY loaded during the encoders' use and stored as the current value once leaving the page is AUTOMATICALLY loaded during the encoders' use and stored as current value once left the page.

Audio Signal Input (A/B/C/D) Path Block Scheme



Name page – from this screen it is possible to assign a 6 character name to the Input Channel. The following is an example screen for a "Name" page labeled "CD-1" for Input Channel A:

Input-A	CD -1	Name
	Name =	CD -1

To Edit press ENTER on the Name Page and the entering arrow will appear as in the example below:

Input-A	CD -1	Name
-> Name =	CD -1	

The first letter position will be blinking.

Select the Character position from the 6 available by rotating the "NAV/PM1" encoder, then by using the "PM2" or "PM3" encoder it is possible to select the desired character.

Once you are happy with your name selection, press "ENTER" to confirm the edited Name. The new name will be stored. The following example shows "CD - X" replacing our previous name of "CD -1":

Input-A	CD - X	Name
	Name =	CD - X

Source page – from this page it is possible to assign one of the following Inputs types:

1. Analog
2. Digital

The following is an example screen for the "Source" where Digital Input is assigned to Input Channel A, which name is "CD - X":

Input-A	CD - X	Source
-> Source = Digital		

After pressing ENTER an arrow will appear on the left of the screen "->" the Input can be selected by rotating either the "PM2" or "PM3" encoders.

Gain page – from this screen it is possible to set the Input Channels Level from -12dB to +6dB, press ENTER an arrow will appear on the left of the screen "->" then use the "PM1" or "PM2" buttons.

The value set on this screen will only affect the input level of the selected Channel A, B, C or D.

The following is an example screen for the "Gain" page that has set the Gain of Input Channel A "CD - X" to +0.0dB:

Input-A	CD - X	Gain
-> Gain = + 0.0dB		

Delay page – from this page it is possible to set the Input Channels Delay Time from 000.0000mS up to 848.9984mS, by steps of 1mS or 20.8uS.

To set the Delay time press ENTER, an arrow will appear on the left of the screen "->". then use the "PM2" encoder to set the Delay Time in steps of 1mS and the "PM3" for setting the "fine" Delay Time in steps of 20.8 microseconds.

The following is an example screen for the "Delay" page where the Delay Time of Input Channel A is set to 160.1872mS:

Input-A	CD - X	Delay
-> Delay = 160.1872mS		

EQ: [x] sub-menu – from this sub-menu it is possible to set the Input Channels seven available Parametric or Shelving Filters.

Input-A	CD – X	EQ-X
1.00KHz	BW1.05	0.0dB

The M44T allows the user to select either Bell or Shelving Parameters and assign them independently using the 5 available filters.

In order to select the filter's type, it is necessary to have the filter's GAIN=0.0dB, then using the PM2 encoder, rotate it "clockwise" in order to decide the Bell filter's Bandwidth, or "counter-clockwise" to select the Shelving filter type (Low or High) and its order (1st or 2nd).

So, in order to define the filter type for the filter number 1 ("x"=1), it is necessary from the above screen, to enter the filter's editing page pressing the ENTER button, and the screen has to appear as follows:

Input-A	CD - X	EQ-1
-> 1.00KHz	BW1.05	0.0dB

In this case, the filter's GAIN=0.0dB, and being BW=1.05, the current filter selected is a Bell type. Now, rotating the PM2 encoder clockwise, the parameter BW will range from 0.05 up to 3 for identifying a bandwidth value for a Bell filter.

If a Bell filter is selected, then the Gain can be modified from 0.0dB and the BW will range between 0.05 and 3.

If the user wants to select a Shelving filter from the above setting, with the GAIN=0.0dB [if the GAIN is not 0.0dB, it is necessary to set it at 0.0dB using the PM3 encoder], rotate the PM2 counter-clockwise. Once BW reaches the 0.05 value, at the next step of the PM2 counter-clockwise rotation, the selection of the Shelving filters will be entered.

Still rotating the PM2 counter-clockwise, the Shelving filters and their order will be selectable in the following sequence:

1. 1st order Low Shelving = -6LoSh [on the screen]
2. 2nd order Low Shelving = -12LoSh [on the screen]
3. 1st order High Shelving = -6HiSh [on the screen]
4. 2nd order High Shelving = -12HiSh [on the screen]

Once the desired Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

BELL Filter: As an example, if we want to set a bell filter within EQ-1, then the BW has to be set at a desired value of say 1.00 using the PM2 encoder, the GAIN at say +3dB using the PM3 encoder and the center Frequency at say 1.00KHz with the NAV/PM1 encoder. The EQ sub-menu screen will show the following:

Input-A	CD - X	EQ-1
->1.00kHz	BW=1.00	+ 3.0dB

Once in the Bell Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's Center Frequency, Bandwidth BW and Gain. The Center Frequency of the Parametric Filter can be edited using the "NAV/PM1" encoder, the BW the "PM2" encoder and the Gain the "PM3" encoder:

"Center Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"Bandwidth BW": the selectable BW range is from 0.05 Octave to 3 Octave in steps of 0.05 Octave and can be adjusted by rotating the "PM2" encoder.

"Gain": the selectable Gain range is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

Low Shelving Filter: As an example if we want to set a low shelving filter within EQ-1 then the PM2 encoder has to be rotated counter-clockwise until the desired Low Shelving filter say -6LoSh appears on the screen, the GAIN at say +3.0dB using the PM3 encoder and the High Cut Frequency at say 1.00KHz with the NAV/PM1 encoder. The EQ sub-menu screen will show the following

Input-A	CD - X	EQ-1
->1.00kHz	-6LoSh	+ 3.0dB

Note: Once the desired Low Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

Once in the Low Shelving Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's High Cut Frequency, Filter's Order and Gain.

The Hi Cut Frequency of the Low Shelving Filter can be edited using the "NAV/PM1" encoder, the Filter's Order can be adjusted by the "PM2" encoder and the Gain the "PM3" encoder:

"Hi Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"Low Shelving Order": the selectable Low Shelving Filter's range can be selected between the 1st (Lo-1st.) and the 2nd (Lo-2nd.) one.

"Gain": the selectable range of the Gain is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

High Shelving Filter: As an example if we want to set a high shelving filter within EQ-1 then the PM2 encoder has to be rotated counter-clockwise until the desired High Shelving filter say -6HiSh appears on the screen, the GAIN at say +3dB using the PM3 encoder and the Low Cut Frequency at say 1.00KHz with the NAV/PM1 encoder.
The EQ sub-menu screen will show the following

Input-A	CD - X	EQ-1
->1.00kHz	-6HiSh	+ 3.0dB

Note: Once the desired High Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

Once in the High Shelving Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's Low Cut Frequency, Filter's Order and Gain.

The Lo Cut Frequency of the High Shelving Filter can be edited using the "NAV/PM1" encoder, the Filter's Order can be adjusted by the "PM2" encoder and the Gain the "PM3" encoder:

"Lo Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"High Shelving Order": the selectable High Shelving Filter's range can be selected between the 1st (Lo-1st.) and the 2nd (Lo-2nd.) one.

"Gain": the selectable range of the Gain is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

Note1: once the desired options have been selected using the 3 encoders, they are automatically saved as current and stored in the M44T system status once leaving the page.

Note2: to exit this page, push the "ESC" button.

- **Menu "Output 1/2/3/4" Output Channels Editing [access by pushing the "1/2/3/4" buttons]**

From the "Default Screen", it is possible to access the "Output Channel" menu by pressing the "1" or "2" or "3" or "4" button. Once pressed, the related blue "EDIT" LED will turn ON.

The Sub-Menus pages can now be scrolled through by rotating clockwise and counter-clockwise the "NAV/PM1" encoder.

For parameter editing it is necessary to press ENTER and an arrow will appear on the left of the screen "->". Then use the "PM2" and "PM3" encoders for selecting and setting the parameter values. On some parameters that have three independent values, you will also need to use the PM1 encoder, for example for the filter's parameter setting.

Note: All parameter editing can be done using the "NAV/PM1", "PM2", and "PM3" encoders and the current shown value of the selected option is AUTOMATICALLY loaded during the encoders' use and stored as the current value once leaving the page.

Audio Signal Output (1/2/3/4) Path Block Scheme



HPF sub-menu – from this sub-menu it is possible to set the Output Channels High Pass Filter (HPF).

The following is an example of a HPF sub-menu screen with the filter set at 24dB Linkwitz/Riley on Output1... using the name "High" (see later for assigning a Name to the outputs):

Out-1	High	HPF
-> 20.0 Hz	Lnk/Ril	24dB

The filter's parameters can be modified by use the "PM2" and "PM3" encoders for editing the Filter's Low Cut Frequency and the Filter's Type and Order.

The Low Cut Frequency of the High Pass Filter can be edited using the "PM2" encoder and the Filter's Type and Order can be edited by using the "PM3" encoder.

"Low Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "PM2" encoder.

"High Pass Type and Order": allows you to select the X-Over's High Pass Filter Shape and Order.

The available shapes and orders for the High Pass Filter, that are accessible by rotating the "PM3" encoder, are listed below:

- No Cut-Off (High Pass Filter Bypassed)
- Butwrth 6dB (Butterworth Filter 6dB/Oct Slope)
- Butwrth 12dB (Butterworth Filter 12dB/Oct Slope)
- Lnk/Ril 12dB (Linkwitz/Riley Filter 12dB/Oct Slope)
- Bessel 12dB (Bessel Filter 12dB/Oct Slope)
- Butwrth 18dB (Butterworth Filter 18dB/Oct Slope)
- Butwrth 24dB (Butterworth Filter 24dB/Oct Slope)
- Lnk/Ril 24dB (Linkwitz/Riley Filter 24dB/Oct Slope)
- Bessel 24dB (Bessel Filter 24dB/Oct Slope)

Note1: once the desired options have been selected using the 2 encoders, they are automatically saved as current and stored in the M44T system status once leaving the page.

Note2: to exit this page, push the "ESC" button.

LPF sub-menu – from this sub-menu it is possible to set the Output Channels Low Pass Filter (LPF). The following is an example of a LPF sub-menu screen with the filter set at 24dB Linkwitz/Riley on Output1... using the name "Low" (see later for assigning a Name to the outputs):

Out-1	Low	LPF
-> 20.0 Hz	Lnk/Ril	24dB

The filter's parameters can be modified by use the "PM2" and "PM3" encoders for editing the Filter's High Cut Frequency and the Filter's Type and Order.

The High Cut Frequency of the Low Pass Filter can be edited using the "PM2" encoder and the Filter's Type and Order can be edited by using the "PM3" encoder.

"High Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "PM2" encoder.

"Low Pass Type and Order": this page allows you to select the X-Over's Low Pass Filter Shape and Order.

The available shapes and orders for the Low Pass Filter that are accessible by rotating the "PM3" encoder are listed below:

- No Cut-Off (Low Pass Filter Bypassed)
- Butwrth 6dB (Butterworth Filter 6dB/Oct Slope)
- Butwrth 12dB (Butterworth Filter 12dB/Oct Slope)
- Lnk/Ril 12dB (Linkwitz/Riley Filter 12dB/Oct Slope)
- Bessel 12dB (Bessel Filter 12dB/Oct Slope)
- Butwrth 18dB (Butterworth Filter 18dB/Oct Slope)
- Butwrth 24dB (Butterworth Filter 24dB/Oct Slope)
- Lnk/Ril 24dB (Linkwitz/Riley Filter 24dB/Oct Slope)
- Bessel24dB (Bessel Filter 24dB/Oct Slope)

Note1: once the desired options have been selected using the 2 encoders, they are automatically saved as current and stored in the M44T system status once leaving the page.

Note2: to exit this page, push the "ESC" button.

EQ: [x] sub-menu – from this sub-menu it is possible to set the Output Channels seven available Parametric or Shelving Filters.

Out-1	Name	EQ-X
1.00KHz	BW1.05	0.0dB

The M44T allows the user to select either Bell or Shelving Parameters and assign them independently using the 5 available filters.

In order to select the filter's type, it is necessary to have the filter's GAIN=0.0dB, then using the PM2 encoder, rotate it "clockwise" in order to decide the Bell filter's Bandwidth, or "counter-clockwise" to select the Shelving filter type (Low or High) and its order (1st or 2nd).

So, in order to define the filter type for the filter number 1 ("x"=1), it is necessary from the above screen, to enter the filter's editing page pressing the ENTER button, and the screen has to appear as follows:

Out-1	Name	EQ-1
-> 1.00KHz	BW1.05	0.0dB

In this case, the filter's GAIN=0.0dB, and being BW=1.05, the current filter selected is a Bell type. Now, rotating the PM2 encoder clockwise, the parameter BW will range from 0.05 up to 3 for identifying a bandwidth value for a Bell filter.

If a Bell filter is selected, then the Gain can be modified from 0.0dB and the BW will range between 0.05 and 3.

If the user wants to select a Shelving filter from the above setting, with the GAIN=0.0dB [if the GAIN is not 0.0dB, it is necessary to set it at 0.0dB using the PM3 encoder], rotate the PM2 counter-clockwise. Once BW reaches the 0.05 value, at the next step of the PM2 counter-clockwise rotation, the selection of the Shelving filters will be entered.

Still rotating the PM2 counter-clockwise, the Shelving filters and their order will be selectable in the following sequence:

1. 1st order Low Shelving = -6LoSh [on the screen]
2. 2nd order Low Shelving = -12LoSh [on the screen]
3. 1st order High Shelving = -6HiSh [on the screen]
4. 2nd order High Shelving = -12HioSh [on the screen]

Once the desired Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

BELL Filter: As an example, if we want to set a bell filter within EQ-1, then the BW has to be set at a desired value of say 1.00 using the PM2 encoder, the GAIN at say +3dB using the PM3 encoder and the center Frequency at say 1.00KHz with the NAV/PM1 encoder. The EQ sub-menu screen will show the following

Out-1	Name	EQ-1
->1.00kHz	BW=1.00	+ 3.0dB

Once in the Bell Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's Center Frequency, Bandwidth BW and Gain. The Center Frequency of the Parametric Filter can be edited using the "NAV/PM1" encoder, the BW the "PM2" encoder and the Gain the "PM3" encoder:

"Center Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"Bandwidth BW": the selectable BW range is from 0.05 Octave to 3 Octave in steps of 0.05 Octave and can be adjusted by rotating the "PM2" encoder.

"Gain": the selectable Gain range is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

Low Shelving Filter: As an example if we want to set a low shelving filter within EQ-1 then the PM2 encoder has to be rotated counter-clockwise until the desired Low Shelving filter say -6LoSh appears on the screen, the GAIN at say +3.0dB using the PM3 encoder and the High Cut Frequency at say 1.00KHz with the NAV/PM1 encoder. The EQ sub-menu screen will show the following

Out-1	Name	EQ-1
->1.00kHz	-6LoSh	+ 3.0dB

Note: Once the desired Low Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

Once in the Low Shelving Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's High Cut Frequency, Filter's Order and Gain.

The Hi Cut Frequency of the Low Shelving Filter can be edited using the "NAV/PM1" encoder, the Filter's Order can be adjusted by the "PM2" encoder and the Gain the "PM3" encoder:

"Hi Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"Low Shelving Order": the selectable Low Shelving Filter's range can be selected between the 1st (Lo-1st.) and the 2nd (Lo-2nd.) one.

"Gain": the selectable range of the Gain is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

High Shelving Filter: As an example if we want to set a high shelving filter within EQ-1 then the PM2 encoder has to be rotated counter-clockwise until the desired High Shelving filter say -6HiSh appears on the screen, the GAIN at say +3dB using the PM3 encoder and the Low Cut Frequency at say 1.00KHz with the NAV/PM1 encoder.

Out-1	Name	EQ-1
->1.00kHz	-6HiSh	+ 3.0dB

Note: Once the desired High Shelving filter is selected, the PM3 can then be used to select the desired GAIN and when the GAIN is set at a value different from 0.0dB, then the filter type cannot be changed until this GAIN is returned to 0.0dB.

Once in the High Shelving Filter's edit screen all the filter's parameters can be modified using the "NAV/PM1", "PM2" and "PM3" encoders for editing the Filter's Low Cut Frequency, Filter's Order and Gain.

The Lo Cut Frequency of the High Shelving Filter can be edited using the "NAV/PM1" encoder, the Filter's Order can be adjusted by the "PM2" encoder and the Gain the "PM3" encoder:

"Lo Cut Frequency": the selectable frequencies range is from 20Hz to 20kHz in steps of 1/24 of an Octave and can be adjusted by rotating the "NAV/PM1" encoder.

"High Shelving Order": the selectable High Shelving Filter's range can be selected between the 1st (Lo-1st.) and the 2nd (Lo-2nd.) one.

"Gain": the selectable range of the Gain is from -15dB to +15dB in steps of 0.5 dB and can be adjusted by rotating the "PM3" encoder.

Note1: once the desired options have been selected using the 3 encoders, they are automatically saved as current and stored in the M44T system status once leaving the page.

Note2: to exit this page, push the "ESC" button.

Vu-Meter page – from this page it is possible to select what is shown on the Outputs' LED meters, by using the "PM1" or "PM2" encoders.

The outputs' LED meters can show the Output signal LEVEL or the Output Limiters' activity.

When the Limiters' activity is selected, the LED meters will show, from top down, the activity of the Limiter on the output

Out-1	Name	Vu-Meter
-> Vu-Meter =	Limiter Act	

Name page – from this screen it is possible to assign a 6 character name to the Output Channel. The following is an example screen for a "Name" page labeled "Low" for Output Channel 1:

Out-1	Low	Name
Name = Low		

To Edit press ENTER on the Name Page and the entering arrow will appear as in the example below:

Out-1	Low	Name
-> Name = Low		

The first letter position will be blinking.

Select the Character position from the 6 available by rotating the "NAV/PM1" encoder, then by using the "PM2" or "PM3" encoder it is possible to select the desired character.

Once you are happy with your name selection, press "ENTER" to confirm the edited Name. The new name will be stored. The following example shows "Sub" replacing our previous name of "Low":

Out-1	Sub	Name
Name = Sub		

Source page – from this page it is possible to assign any Output Channel and the level of signal for each Input, from OFF to 0dB by 1dB steps:

1. A = OFF, -30dB...., 0dB
2. B = OFF, -30dB...., 0dB
3. C = OFF, -30dB...., 0dB
4. D = OFF, -30dB...., 0dB

After selecting the Source page, a 4 channel mixer allows you to mix the 4 inputs of the M44T and to assign the mixed signal to the Output.

The following "Source" example screen shows the four inputs assigned with different signal levels to Output Channel 1:

Out-1	Name	Source
-> A=OFF B=-8 C=-3 D=0dB		

After pressing ENTER an arrow will appear on the left of the screen "->" the Input can be selected by rotating the NAV/PM1 encoder and the Input channel amount can be selected by rotating either the "PM2" or "PM3" encoders.

Gain page – from this screen it is possible to set the Output Channels Level from -12dB to +12dB, press ENTER an arrow will appear on the left of the screen “->” then use the “PM1” or “PM2” buttons.

The value set on this screen will only affect the input level of the selected Channel 1/2/3/4.

The following is an example screen for the “Gain” page where the Gain of the Output Channel 1 is set to +0.0dB

Out-1	Name	Gain
-> Gain = + 0.0dB		

Limiter sub-menu – from this page it is possible to set the Output Channels Limiter.

The following is an example screen for the Limiter page where the Attack Time of the Limiter is set at 5ms, the Release Time is set at 0.2Sec and the Limiter Active Threshold is set at +5dB:

Out-1	Name	Limiter
A: 5ms R: 0.2s +5.0dB		

Once pushing ENTER the Limiter's parameters can be modified using the “NAV/PM1”, “PM2” and “PM3” encoders for editing the Limiter's Attack Time [A]., Release Time [R] and Active Threshold.

Once pushing ENTER the above screen will change as follows:

Out-1	Name	Limiter
-> A: 5ms R: 0.2s +5.0dB		

The Attack Time [A] can be edited using the “NAV/PM1” encoder, the Release Time [R] the “PM2” encoder and the Limiter Active Threshold the “PM3” encoder.

“Attack Time [A]”: the selectable range of the Limiter's Attack Time is from 5ms to 200ms in steps of 1ms - from 5ms to 20ms then 5ms - from 20ms to 30ms then 10ms - from 30ms to 100ms and 20ms - from 100ms to 200ms.

The Limiter's Attack Time can be adjusted by rotating the “NAV/PM1” encoder.

“Release Time [R]”: the selectable range of the Limiter's Release Time is from 0.1s to 3s in steps of 0.1s and can be adjusted by rotating the “PM2” encoder.

“Limiter Active Threshold”: the selectable range of the Limiter's Threshold is from +20dB (Limiter not active) to -10.0dB in steps of 0.2 dB and can be adjusted by rotating the “PM3” encoder.

Note1: once the desired options have been selected using the 3 encoders, they are automatically saved as current and stored in the M44T system status once leaving the page.

Note2: to exit this page, push the “ESC” button.

Delay page – from this page it is possible to set the Output Channels Delay Time from 000.0000mS up to 848.9984mS, by steps of 1mS or 20.8uS.

To set the Delay time press ENTER an arrow will appear on the left of the screen “->”. then use the “PM2” encoder to set the Delay Time in steps of 1mS and the “PM3”, for setting the “fine” Delay Time in steps of 20.8 microseconds.

The following is an example screen for the “Delay” page where the Delay Time of Output Channel 1 is set to 160.1872mS:

Out-1	Name	Delay
-> Delay = 160.1872mS		

Polarity page – from this page it is possible to set the Output Channels Polarity, by using the “PM1” or “PM2” encoders.

The polarity can be “Normal” or “Inverted” (which means rotated of 180 Degrees).

The following is an example of a “Polarity” screen where the Polarity of Output Channel 1 is set to “Normal”

Out-1	Name	Polarity
-> Polarity = Normal		

- **Input and Output Channels Last Edited Parameter Return Function**

Once you have escaped out of parameter editing within the individual Input or Output channels the M44T will remember this last editing action on that Channel. When you return for your next editing action pressing the EDIT button on that channel will immediately return you to the screen related to this last editing action.

This function makes fine tuning or modifying easier when it is necessary to make a number of adjustments to the same parameter in a short time sequence.

- **Input Channels and output Channels LINK Function**

The M44T is able to perform a unique LINK MODE between Input Channels as well as a link between Output Channels to enable quick and immediate editing (you cannot link output to input channels).

To link channels when editing, you will need to select a “Master” channel that will be the one to be edited and have it’s parameters displayed on the LCD screen. You can then select and link other channels (Slaves) that you wish to apply the same changes to.

To enter a link mode session, select the Master channel Edit mode, then link the Slaves by pressing their related Edit buttons.

All Linked channels will be selected ready for adjustment when their “Blue” LED is lit in the Editing mode.

Now all Slave channels and only those selected will modify their parameters accordingly as you edit the Master channel.

All other existing parameters will stay the same within the Slave Channels unless edited by this link with the Master channel.

Note: The LINK function is NOT a COPY function.

If we want to edit the limiter of the Output channels 1/2/4, we can enter the editing mode of Output Channel 1 by pressing the related Edit button and turning on the Blue LED below the Output Channel 1 LED meters. This assigns the "role" of Master and displays this channel's parameters on the LCD:

Out-1	Name	Limiter
A: 5ms	R: 0.2s	+5.0dB

Then press the Edit button of Output Channels 2/4, turning on their related "Blue" LED's. Now all parameters edited on Output Channel 1, will also be applied to channels 2 and 4.

If we want to remove one of the linked channels from the Link, press the related Edit button.

Exiting the editing of the Master channel during a Link session will automatically terminate that session. The Link will also be automatically terminated if, during the editing of Output Channels you jump across to begin editing an Input channel or vice versa.

● **Factory Reset**

In the event of the password being lost or any other reason the user may require the unit to be reset to the original factory settings, a "Factory Reset" that will clear all settings of the M44T and return the device to the original factory setting, is available to the user.

Note: Continuing with this process will mean the M44T will re-initialize to the original factory settings and any previously stored information and changed parameters will be permanently lost.

– **Use the following procedure to perform the factory reset:**

1. While the M44T is switched OFF, simultaneously press the ENTER+ESC+UTILITY buttons on the front panel.
2. Maintain pressure on all three buttons as you turn the power switch to On and the following LCD screen appears on the M44T:

Please Wait..... Memory Reset

3. Release the buttons and wait for the M44T to re-initialize.

Once completed, the M44T will resume regular operation as though it was a new unit from the factory and no previously programmed parameters will be available for use.

- **USB/NETWORK Remote Control protocol for Presets Changing and Gain/Volume controls**

The following is the HEX Code for controlling the M44T recall presets and master volume control:

Preset Changing:

CMD_RECALL_PRESET: CMD=1BH

A. The User has to send the following Command, including the number of the preset to load on the unit:

TX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	1BH	NPreset	00H	00H	00H	00H	00H	00H	00H	F7H

XX = 0,...,31 (ID device)

NPreset=0,...,23 Presetnumber

The M44T's microcontroller will check if the Preset is initialized (available or not yet created...)

B. If YES, then the microcontroller will send back to the User (eg Crestron/AMX Remote Control..) the same frame used by the command

RX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	1BH	NPreset	00H	00H	00H	00H	00H	00H	00H	F7H

So in this case, if the user gets back EXACTLY what was sent, the preset is existing and loaded on the unit.

C. If the preset that the user wanted to load is NOT YET INITIALIZED (not yet created, so not available...). the microcontroller will notify that to the user, sending back the following frame:

RX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	1BH	FFH	00H	00H	00H	00H	00H	00H	00H	F7H

Input Master Gain Control:

UPG_MASTERGAIN_CMD: CMD=14H

A. The User has to send the following Command for modifying the Master Gain affecting the all Inputs' gain:

TX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	14H	00H	00H	00H	00H	00H	00H	00H	Vol	F7H

XX = 0,...,31 (ID device)

Vol= Gains from 0 to 240 (-12dB/ +12dB step 0.1dB)

B. If the command has been properly executed and the Gain/Volume modified, then the microcontroller will send back to the User (eg Crestron/AMX Remote Control..) the same frame used by the command:

RX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	14H	00H	00H	00H	00H	00H	00H	00H	Vol	F7H

Output Master Volume Control:

UPG_MASTERVOL_CMD: CMD=15H

A. The User has to send the following Command for modifying the Master Volume affecting the all Outputs' gain:

TX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	15H	01H	00H	00H	00H	00H	00H	00H	Vol	F7H

XX = 0,...,31 (ID device)

Vol= Gains from 0 to 240 (-12dB/ +12dB step 0.1dB)

B. If the command has been properly executed and the Gain/Volume modified, then the microcontroller will send back to the User (eg Crestron/AMX Remote Control..) the same frame used by the command:

RX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	15H	01H	00H	00H	00H	00H	00H	00H	Vol	F7H

Channels Input Gain and Output Volume Control:

UPDATE GAINS-PHASE: CMD=01H

A. The User has to send the following Command, including the value to be assigned to "Vol", for modifying the Input Gain (Chn = 0, 1, 2, 3) or the Output Volume (Chn = 4, 5, 6, 7) of the particular input or Output channel.

Also the Output signal Phase can be modified:

TX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	01H	Chn	00H	00H	00H	00H	00H	Phs	Vol	F7H

XX = 0,...,31 (ID device)

Chn=0,...,7: Channel selected, 0,...3=In1,...,In4; 4,...,7=Out1,...,Out4; when Cannel 0, 1, 2, 3 selected, then Vol=Input Gain, when Channel 4, 5, 6, 7 selected, then Vol= Output Vol.

Phs= Phase only if the Chn>3; Value=0,1 where 0=direct, 1=inverse (180')

Vol= Gains from 0 to 180 (-12dB/ +6dB step 0.1dB)

B. If the command has been properly executed and the Gain/Volume modified, then the microcontroller will send back to the User (eg Crestron/AMX Remote Control..) the same frame used by the command:

RX:

STX	ID_M	ID_N	CMD	D0	D1	D2	D3	D4	D5	D6	D7	ETX
F0H	C3H	XX	01H	Chn	00H	00H	00H	00H	00H	Phs	Vol	F7H

● M44T Technical Specifications



The M44T Digital Speaker Processor is based on a powerful analog and digital DSP platforms having the following specifications

Analog Input Signal:	ChA/ChB/ChC/ChD	Bal. Female XLR
Maximum Input Level:	+20dBu	
Analog Output Signal:	Ch1/Ch2/Ch3/Ch4	Bal. Male XLR
Maximum Output Level:	+20dBu	
Digital Processing (DSP):	SAM3716, 24bits (data) x 96 bits (coeff.)	
A/D Converters:	AKM5388, 24bits	
D/A Converters:	AKM4396, 24bits	
Sampling Frequency:	48kHz	
S/PDIF Stereo Digital Input:	32kHz, 44.1kHz and 48kHz Sources Accepted	
S/N:	110dBA	
THD+N:	0.005%	
Frequency Response (Bypass):	20Hz – 20kHz (+- 1 dB)	
Power Supply:	Switching Power Supply	
Remote Control:	USB, TCP/IP, NETWORK(TCP/IP and M-LAN)	